


Brief programming instructions


Door (video) intercom TC:Bus with central controller BVS20

Programming of an intercom call button

When programming, the serial number of the internal intercom unit is programmed on the external intercom unit and linked to the desired call button.

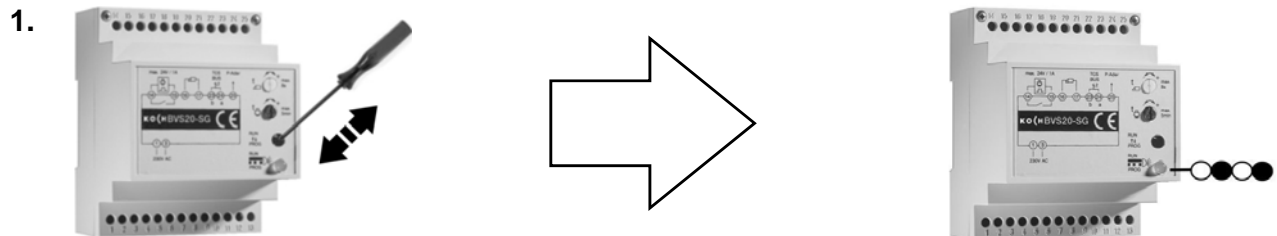


Briefly press the programming button on the BVS20 control unit → the LED flashes
→ Programming mode ON

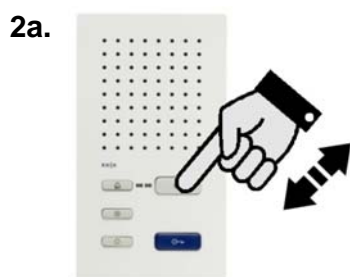

Hands-free internal intercom unit:
Press talk button briefly



Handset intercom unit:
lift the handset


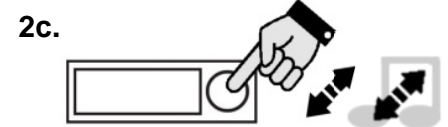


Not accessible internal intercom unit:
Briefly press the apartment doorbell twice. (the 2nd time while it is ringing)

→ A confirmation tone is heard on the external intercom unit (TCU3).




Briefly press the corresponding call button on the external intercom unit within 8 seconds.

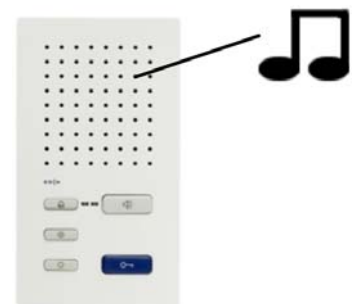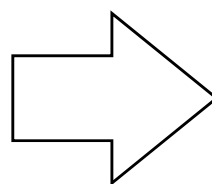

...both the external and internal intercom units start ringing.


Programming further internal intercom units: repeat steps 2 and 3 respectively

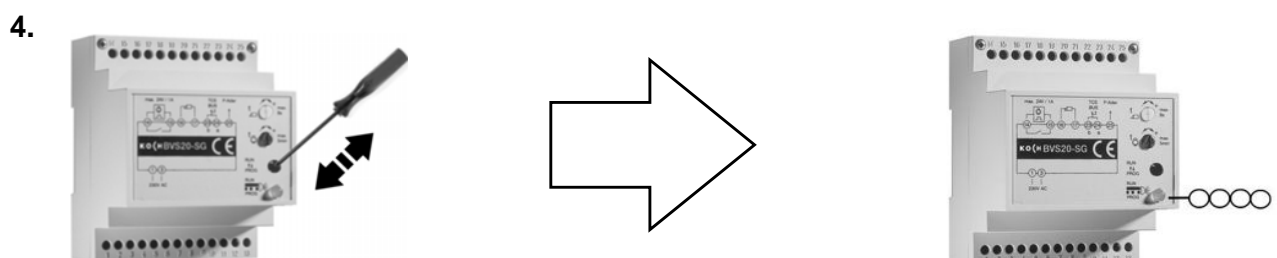

Briefly press the programming button on the BVS20 control unit → the LED lights up permanently
→ Programming mode OFF

Programming an intercom call button, that is already programmed



An intercom call button can be linked with the serial numbers of two different internal intercom units. As a result these two indoor intercom units will ring at the same time in parallel.

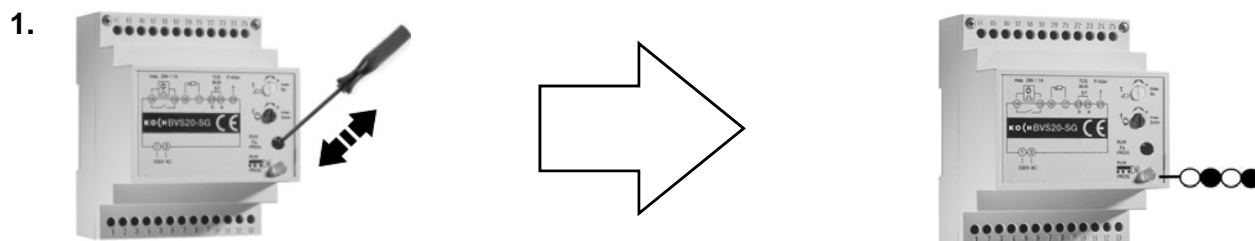

Briefly press the programming button on the BVS20 control unit → the LED flashes
→ Programming mode ON




→ A confirmation tone is heard on the external intercom unit (TCU3).

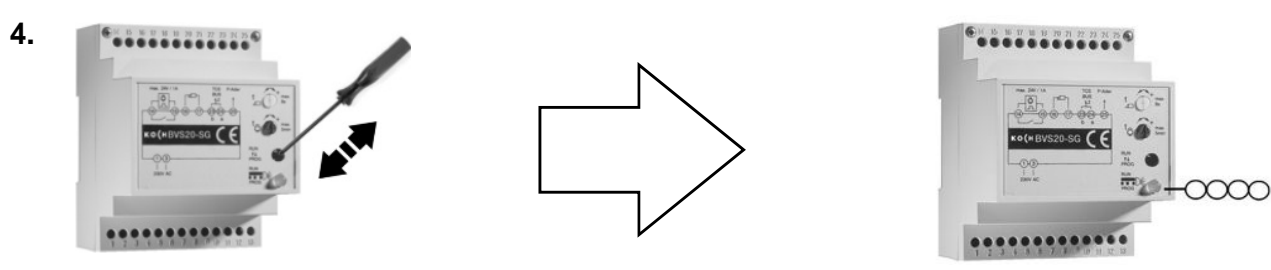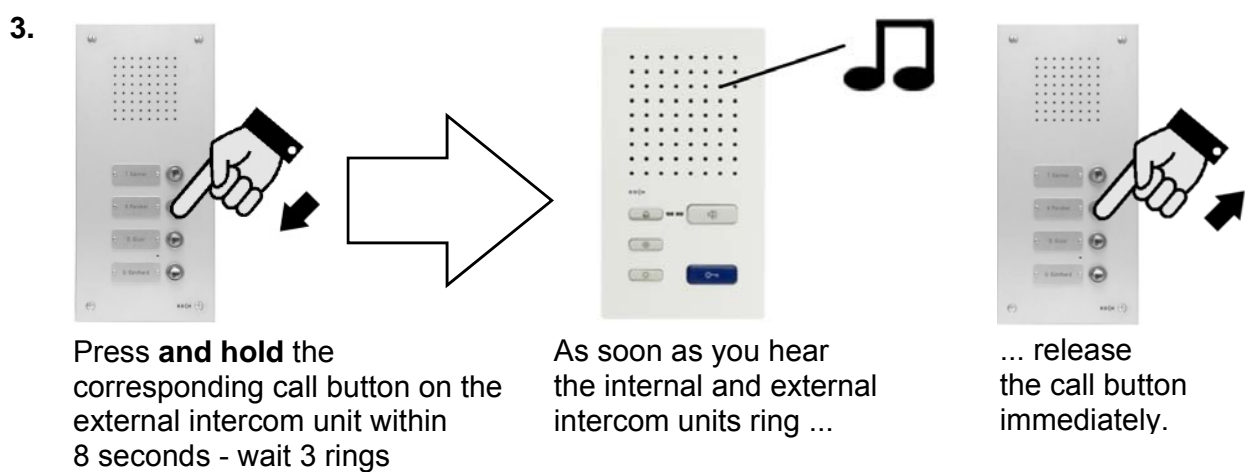


Briefly press the programming button on the control unit → the LED lights up permanently
→ Programming mode OFF

Delete the programming

Before a programmed intercom call button can be reprogrammed, the existing programming must be deleted.

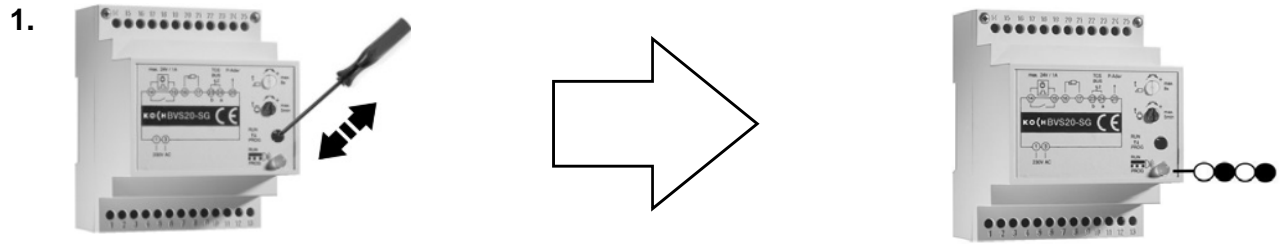


Briefly press the programming button on the BVS20 control unit → the LED flashes
→ Programming mode ON

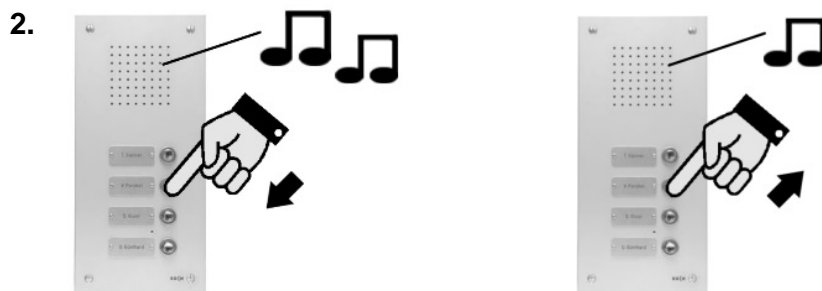

Press and hold the call button....
(for approximately 6 seconds)

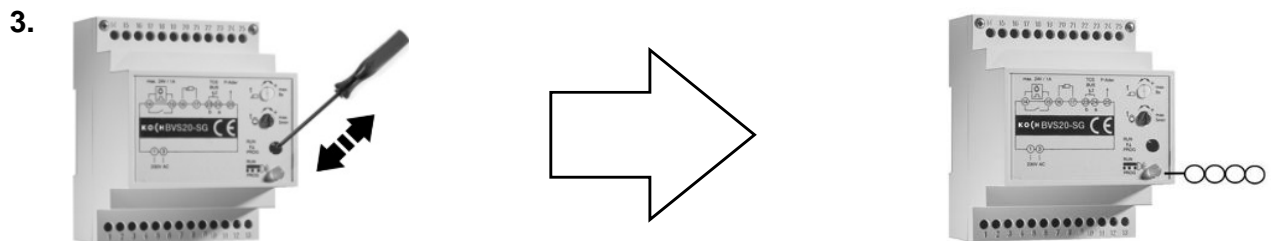



...until the second confirmation tone is heard




Briefly press the programming button on the BVS20 control unit → the LED lights up permanently
→ Programming mode OFF


Determine the programming status of an intercom call button


External intercom units are delivered with or without programming.

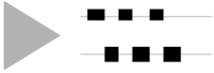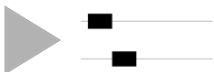Test			
		NoProg tone	Unprogrammed intercom call button
		Ringing tone	Programmed intercom call button
		Error tone	Internal intercom unit not ready for use or faulty programming

Setting the door opener switching time


- 


Set the length of time you would like the door to remain open (min. 0.8 s, max 8 s)
- 


Save time setting: Briefly press the programming button → the display LED flashes
- 

Briefly press the programming button → the display lights up permanently

Setting the light switching time

- 

Set the length of time you would like the light to remain on (min. 0.8 s, max. 5 min).
- 

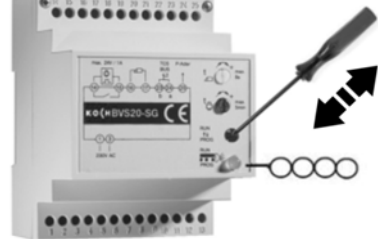Save time setting: Briefly press the programming button → the display LED flashes
- 

Briefly press the programming button → the display lights up permanently

Service

If you have any questions, please contact our technical customer service team

Phone 044 782 6000

Fax 044 782 6001

info@kochag.ch

René Koch AG
 Seestrasse 241
 8804 Au/Wädenswil
 044 782 6000
 044 782 6001 Fax
 info@kochag.ch

KO(H)

look listen talk