

Indoor Video Intercom Station VTC40




Ring tones

Differentiation of calls when ringing from the Entrance, the Landing door and an Internal call. The green LED lights up for 60 sec. when there is a call from the entrance of the house or an internal call.

The image is automatically displayed when there is a call at the door.

User manual

Overview of the device

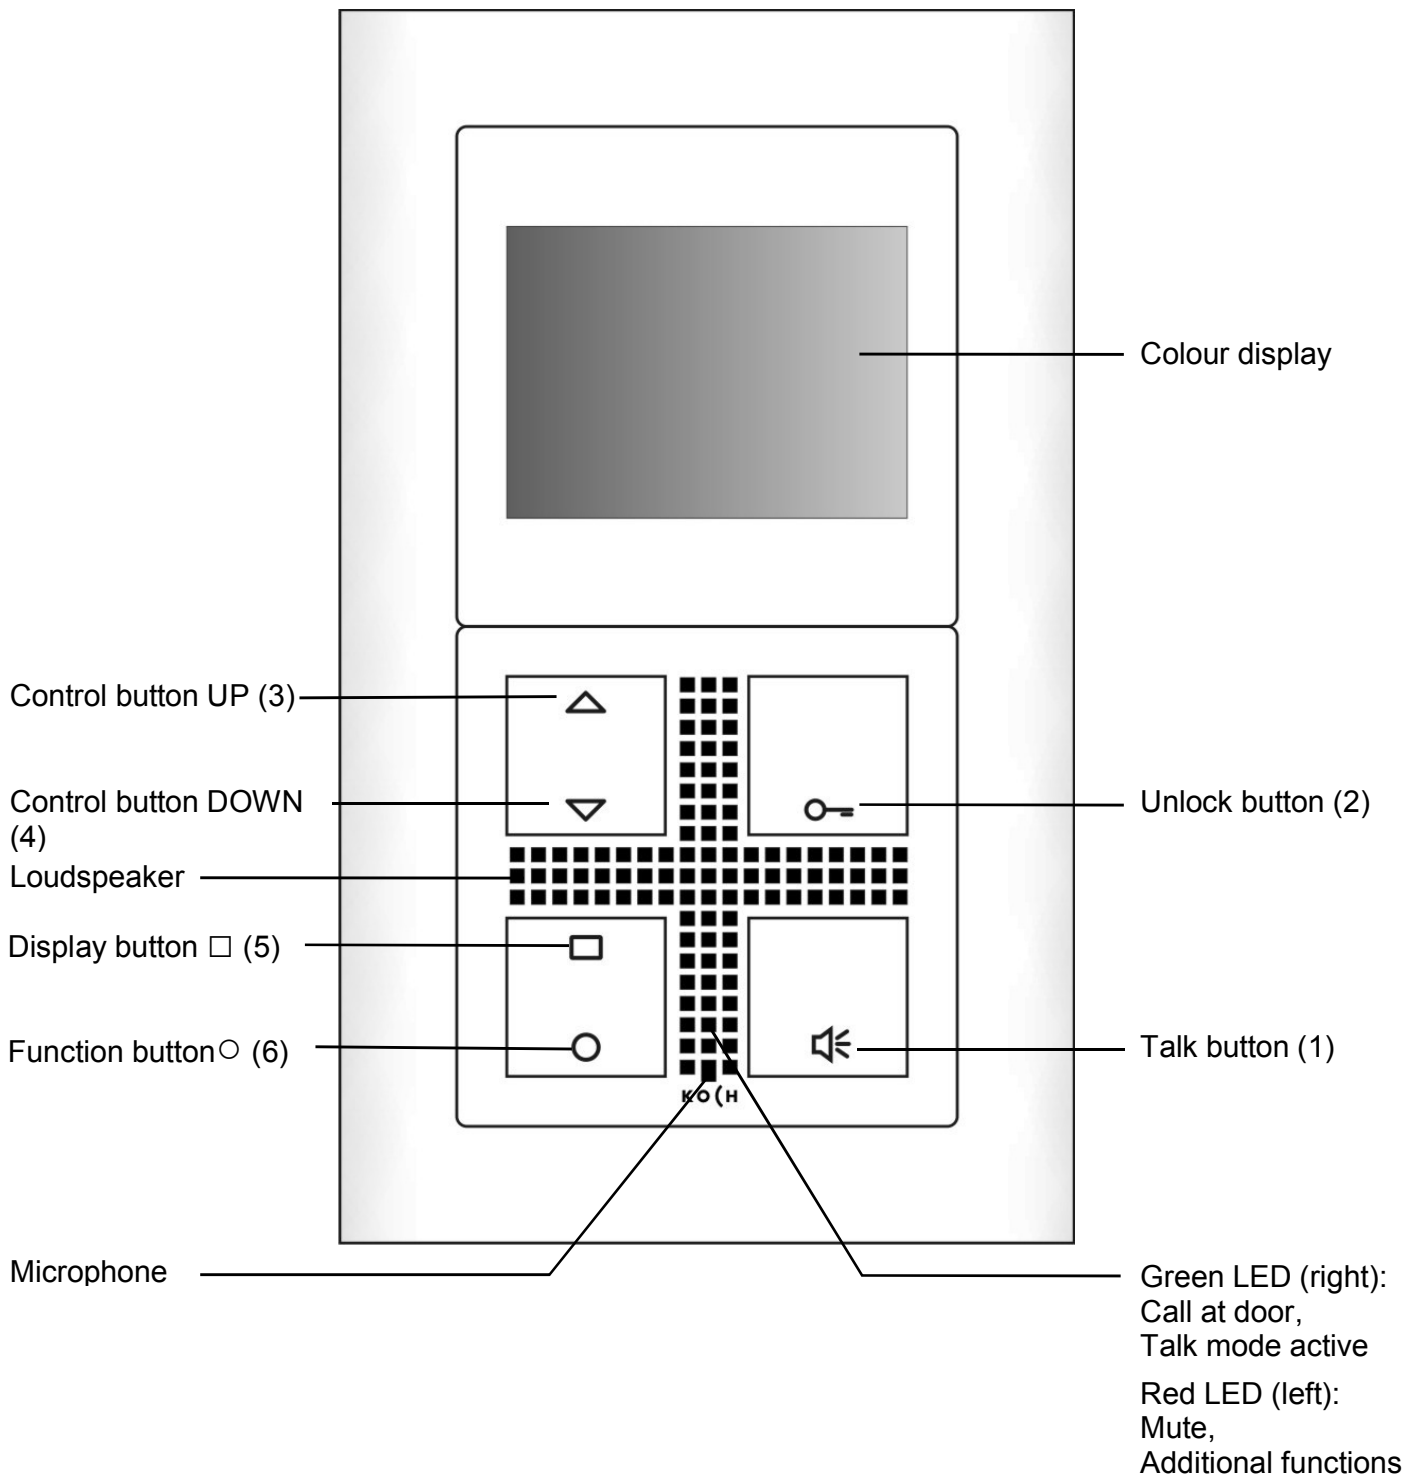

User manual

Instructions for use

- Answer a call
- Hands-free
Press the Talk button (1) briefly; you can now talk without any further action
 - Push-to-talk
Press the Talk button (1) for more than 1 sec.
Press the button: Talk to the external station
Release the button: Listening from the external intercom station
- End a call
- Manually
Press the Talk button (1) briefly
 - After the door is unlocked
Automatic shut-off 4 sec. after pressing the Unlock button
 - Automatically
Automatic shut-off after 60 sec.
- To unlock the door
- Briefly press the Unlock button (2)
- Display image
- Manually
Press the Display button (5) briefly
 - Automatically
Switches on automatically with call at door
- Switch off monitor display
- Automatically
Shuts down automatically 80 sec. or 4 sec. after pressing the Unlock button
- Call volume
- During a call use the Control DOWN (4) or UP (3) button to select the volume required
- Selecting ring tone volume
- When in idle mode use the Control DOWN (4) or UP (3) button to set the volume of the ring tone; a beep will sound to confirm the setting
- Turn off the external station
Activate the external station
- Press the Control button DOWN (4) until the red LED lights up
 - Press the Control button DOWN (3); the red LED goes out
- Function button
- Special function (Control function 8) - Default setting
 - Internal call
 - Call forwarding
 - Doormatic

User manual

Settings

- Switch on Programming mode**
- Press the Function button ○ (6) for approx. 8 until you hear a brief beep
 - The red and green LEDs will flash on the monitor
 - Programming mode switched on
-

- Setting the ring tones**
- Switch on the programming mode (see above)
 - Press Talk button (1)
 - The red and green LEDs will flash on the monitor
- Ring tone for Entrance 1 (AS 0)
- Press the Unlock door (2) repeatedly until you hear the ring tone you require
- Ring tone for a Landing call
- Press the Function button ○ (6) repeatedly until you hear the ring tone you require
- Ring tone for Internal call
- Press the Display button □ (5) repeatedly until you hear the ring tone you require
- Ring tone for Entrance 2 (AS 1-63)
- Press the Talk button (1) repeatedly until you hear the ring tone you require

- Note
- The ring tones can be set in succession once the programming mode has been activated

- Colour saturation adjustment**
- Switch on the programming mode (see above)
 - Press Unlock button (2)
 - The green LED will flash on the monitor
 - Using the Control buttons UP (3) and DOWN (4) adjust the colour saturation to your liking

- Brightness control**
- Switch on the programming mode (see above)
 - Press the Display button (5) □
 - The red LED will flash on the monitor
 - Using the Control buttons UP (3) and DOWN (4) adjust the brightness to your liking
-

- Switch off Programming mode**
- If a button has not been pressed for 8 sec, the programming mode will switch off automatically
 - A beep sounds; the red and green LEDs go out
 - Programming mode switched off

Subject to technical changes