


## Indoor Video Intercom Station VTC40/Alu

---

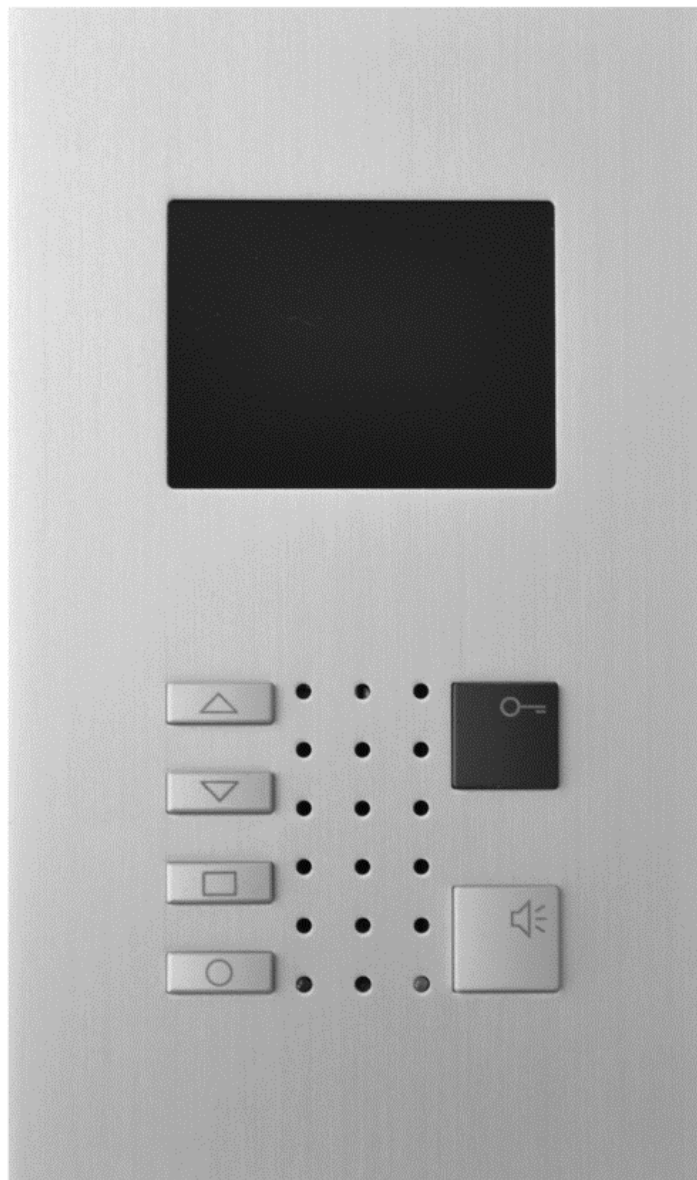

### Ring tones


Differentiation of calls when ringing from the Entrances 1 and 2, the Landing door and an Internal call.

The green LED lights up for 1 minute when there is a call from the entrance of the house or an internal call.

The image is automatically displayed when there is a call at the door.

# User manual

## Overview of the device

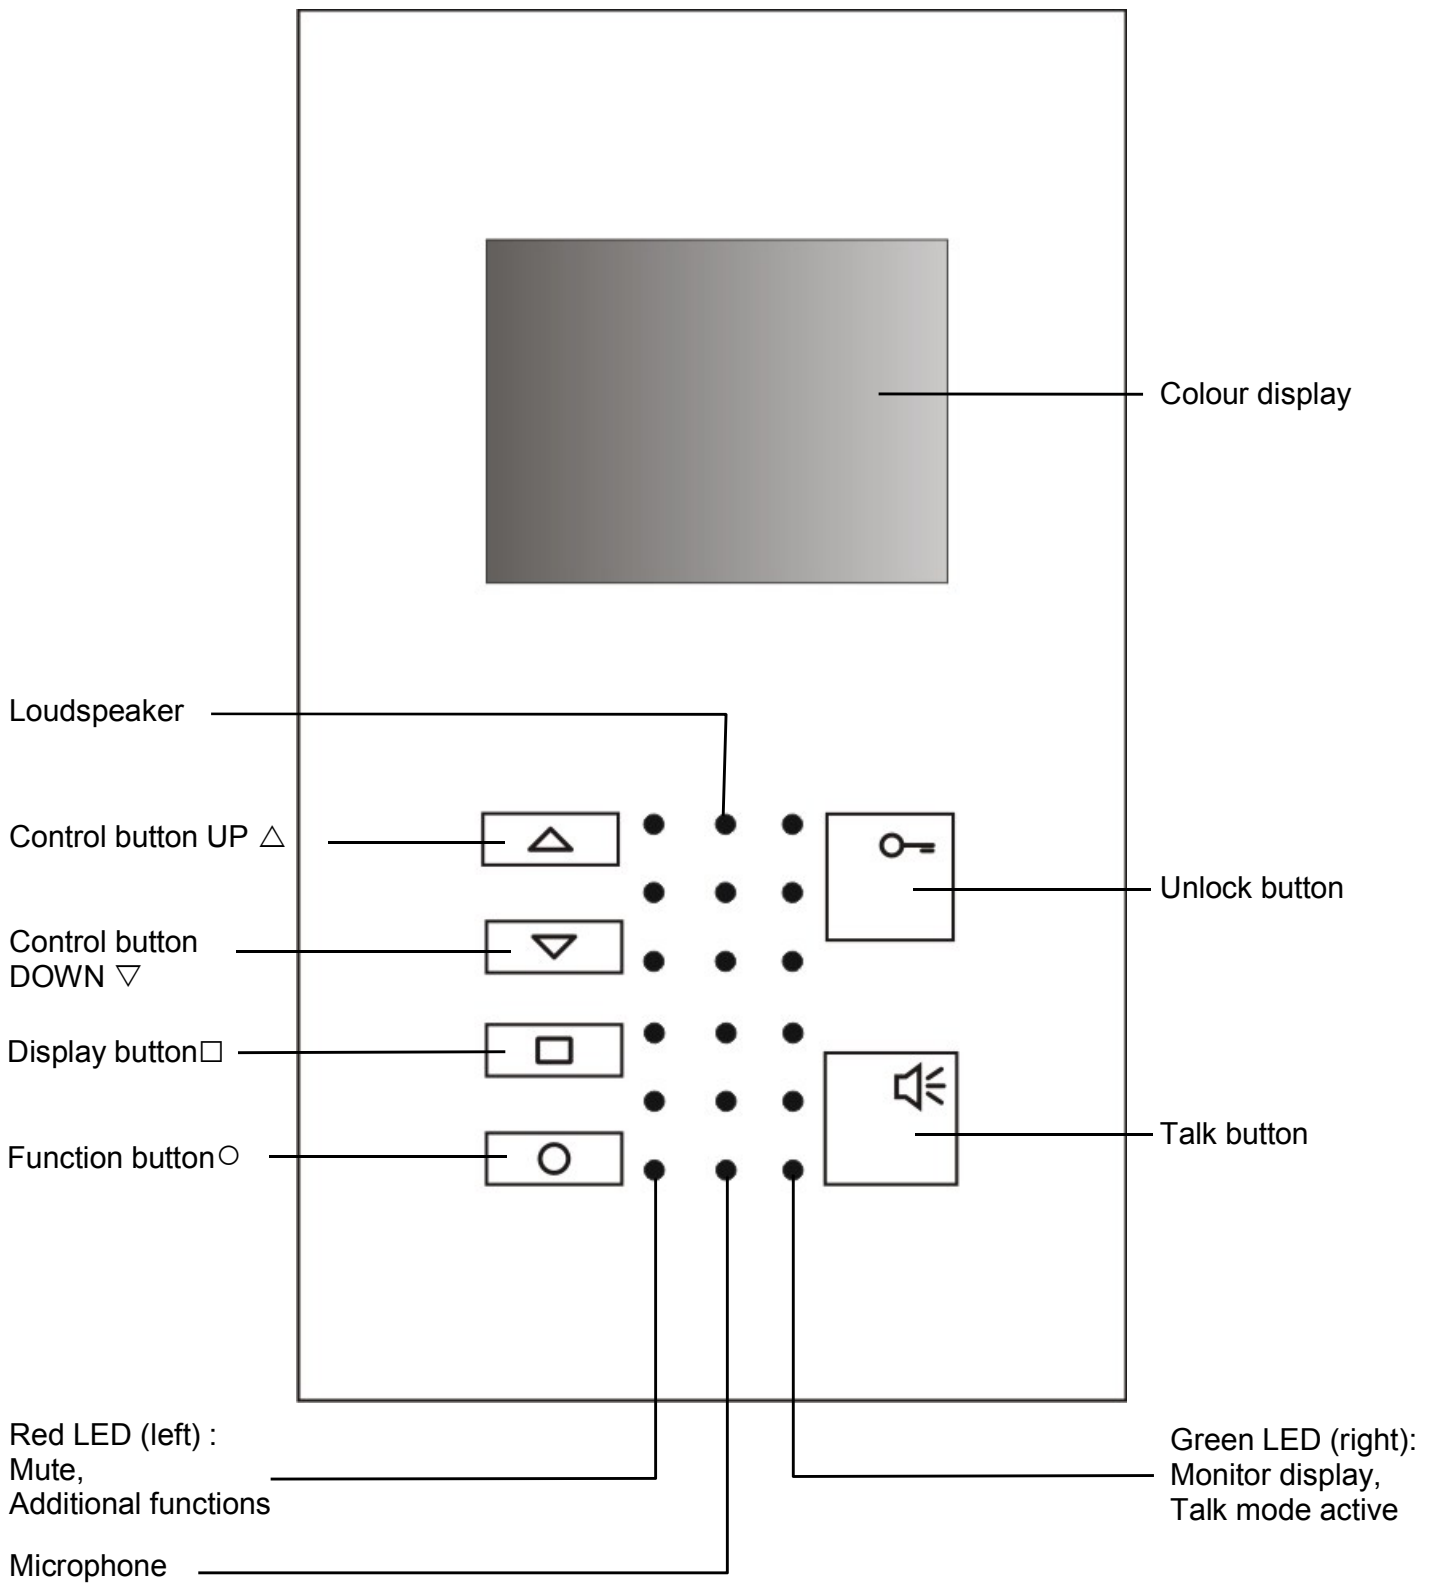

# User manual

## Instructions for use

- Answer a call
- Hands-free  
Press the Talk button briefly; you can now talk without any further action
  - Push-to-talk  
Press the Talk button for more than 1 sec.  
Press the button: Talk to the external intercom station  
Release the button: Listening from the external intercom station
- End a call
- Manually  
Briefly press the Talk button
  - After the door is unlocked  
Automatic shut-off 4 sec. after pressing the Unlock button
  - Automatically  
Automatic shut-off after 60 sec.
- Unlock the door
- Briefly press the Unlock button
- Display image
- Manual  
Display button  press briefly
  - Automatic  
switches on automatically with call from the external station
- Switch off monitor display
- Automatically  
Shuts down automatically after 80 sec. or 4 sec. after pressing the Unlock button
- Call volume
- During the call use the Control DOWN  $\nabla$  or UP button  $\triangle$  to select the volume required
- Selecting ring tone volume
- When in idle mode use the Control DOWN  $\nabla$  or UP button  $\triangle$  to set the volume of the ring tone; a beep will sound to confirm the setting
- Turn off external station
- Press the Control button DOWN  $\nabla$  until the red LED lights up
- Activate the external station
- Press the UP Control button  $\triangle$  ; the red LED goes out
- Function button
- Special function (Control function 8) - Default setting
    - Internal call
    - Call forwarding
    - Doormatic

# User manual

## Settings

- |                                     |  |
|-------------------------------------|--|
| <b>Switch on programming mode</b>   | <ul style="list-style-type: none"><li>• Press the Function button <math>\bigcirc</math> for approx. 8 until you hear a brief beep</li><li>• The red and green LEDs will flash on the monitor</li><li>• Programming mode switched on</li></ul>  |
| <hr/>                               |  |
| <b>Setting the ring tones</b>       | <ul style="list-style-type: none"><li>• Switch on Programming mode (see above)</li><li>• Press the Talk button</li><li>• The red and green LEDs will flash on the monitor</li></ul>  |
| Ring tone for Entrance 1 (AS 0)     | <ul style="list-style-type: none"><li>• Press the Unlock door repeatedly until you hear the ring tone you require</li></ul>  |
| Ring tone for a Landing call        | <ul style="list-style-type: none"><li>• Press the Function button <math>\bigcirc</math> repeatedly until you hear the ring tone you require</li></ul>  |
| Ring tone for Internal call         | <ul style="list-style-type: none"><li>• Press the Display button <math>\square</math> repeatedly until you hear the ring tone you require</li></ul>  |
| Ring tone for Entrance 2 (AS 1-63)  | <ul style="list-style-type: none"><li>• Press the Talk button repeatedly until you hear the ring tone you require</li></ul>  |
| Note                                | <ul style="list-style-type: none"><li>• The ring tones can be set in succession once the programming mode has been activated</li></ul>   |
| <b>Colour saturation adjustment</b> | <ul style="list-style-type: none"><li>• Switch on the programming mode (see above)</li><li>• Press the Unlock button</li><li>• The green LED will flash on the monitor</li><li>• Using the Control buttons UP <math>\triangle</math> and DOWN <math>\nabla</math> adjust the colour saturation to your liking</li></ul>              |
| <b>Brightness control</b>           | <ul style="list-style-type: none"><li>• Switch on the programming mode (see above)</li><li>• Press the Display button <math>\square</math></li><li>• The red LED will flash on the monitor</li><li>• Using the Control buttons UP <math>\triangle</math> and DOWN <math>\nabla</math> adjust the brightness to your liking</li></ul> |
| <hr/>                               |  |
| <b>Switch off programming mode</b>  | <ul style="list-style-type: none"><li>• If a button has not been pressed for 8 sec, the programming mode will switch off automatically</li><li>• A beep sounds; the red and green LEDs go out</li><li>• Programming mode is switched off</li></ul>   |

Subject to technical changes