



Ring tones


Differentiation of calls when ringing from the Entrances 1 and 2, the Landing door and an Internal call.

The green LED lights up for 1 minute when there is a call from the entrance of the house or an internal call.

The image is automatically displayed when there is a call at the door.

User manual

Overview of the device

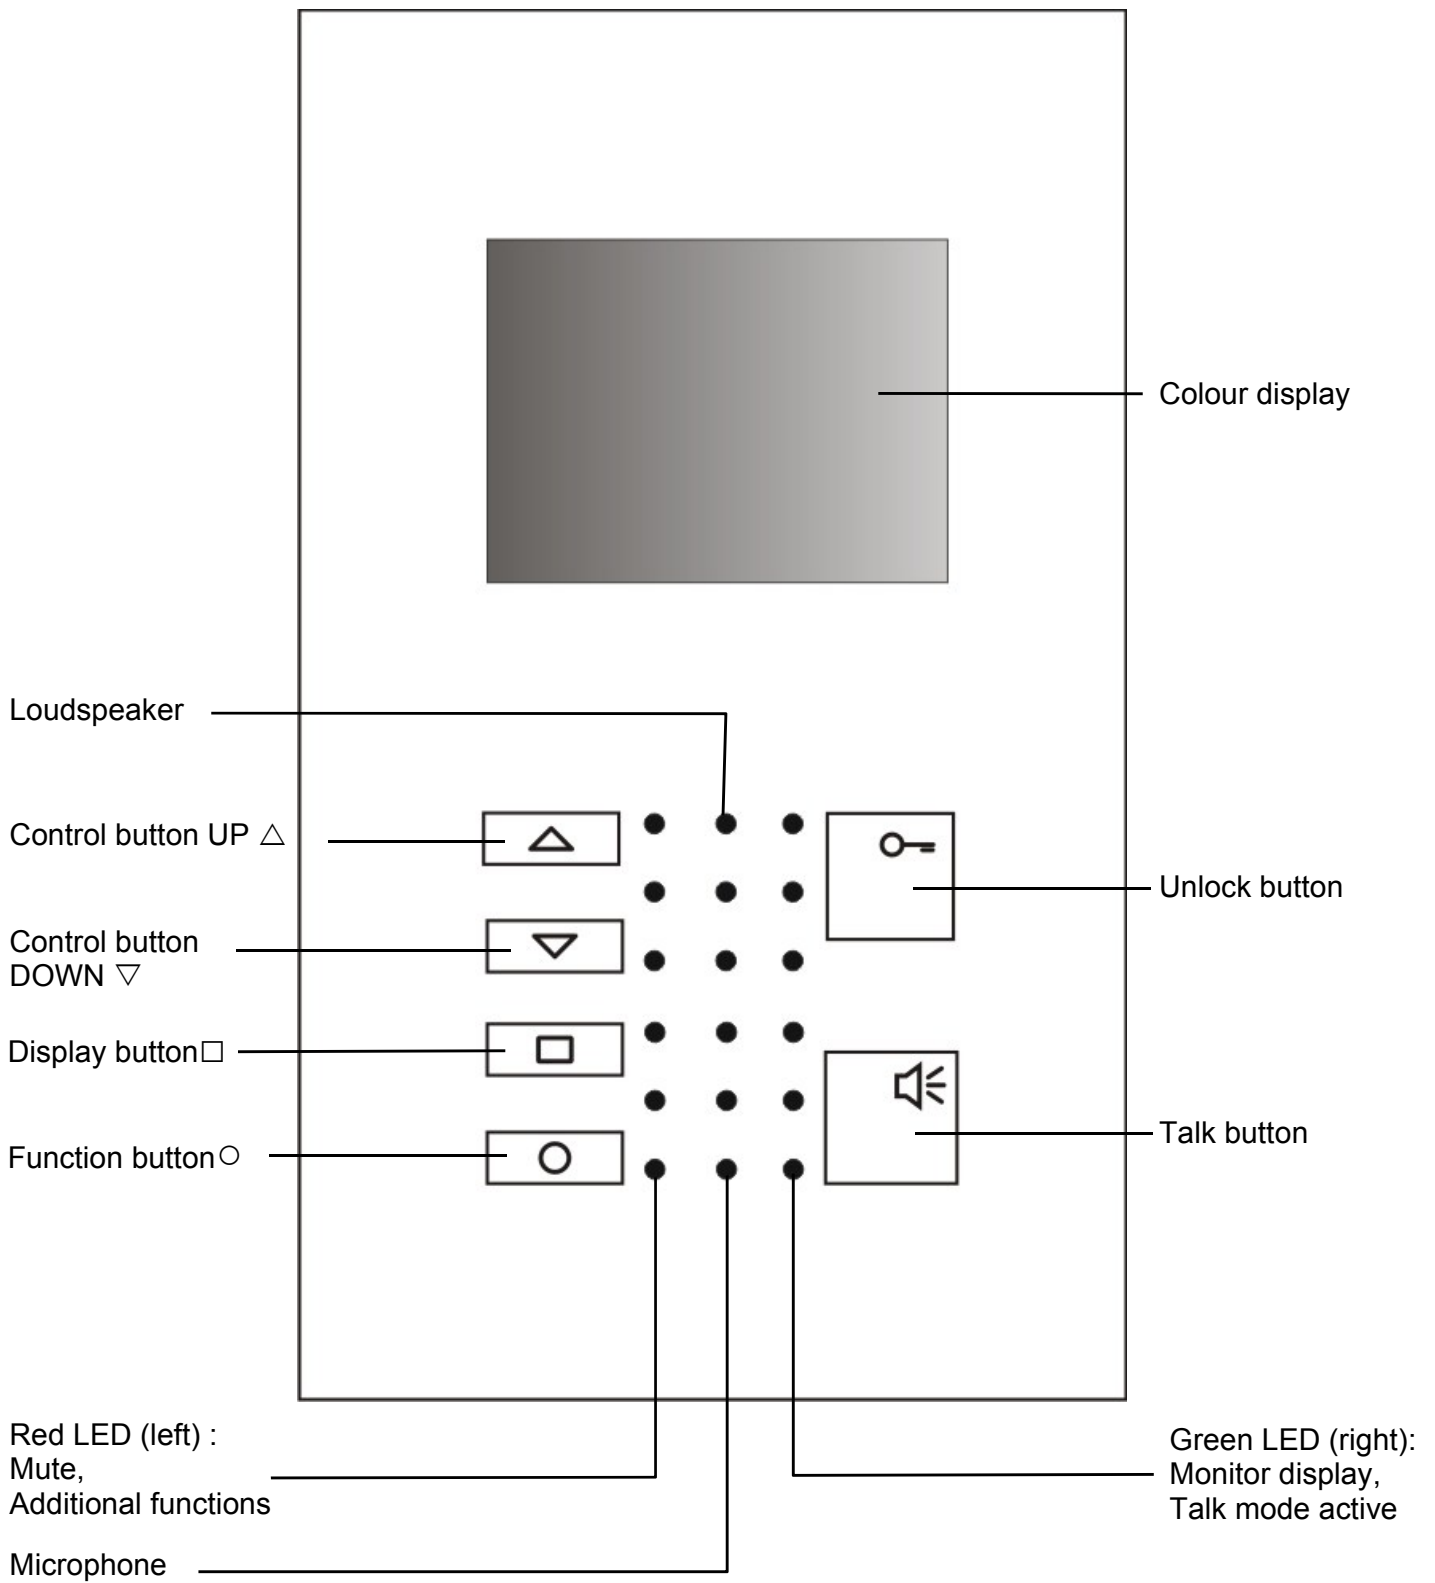

User manual

Instructions for use

- | | |
|--|--|
| Answer a call | <ul style="list-style-type: none">• Hands-free
Press the Talk button briefly; you can now talk without any further action• Push-to-talk
Press the Talk button for more than 1 sec.
Press the button: Talk to the external intercom station
Release the button: Listening from the external intercom station |
| End a call | <ul style="list-style-type: none">• Manually
Briefly press the Talk button• After the door is unlocked
Automatic shut-off 4 sec. after pressing the Unlock button• Automatically
Automatic shut-off after 60 sec. |
| Unlock the door | <ul style="list-style-type: none">• Briefly press the Unlock button |
| Display image | <ul style="list-style-type: none">• Manual
Display button <input type="checkbox"/> press briefly• Automatic
switches on automatically with call from the external station |
| Switch off monitor display | <ul style="list-style-type: none">• Automatically
Shuts down automatically after 80 sec. or 4 sec. after pressing the Unlock button |
| Call volume | <ul style="list-style-type: none">• During the call use the Control DOWN ∇ or UP button \triangle to select the volume required |
| Selecting ring tone volume | <ul style="list-style-type: none">• When in idle mode use the Control DOWN ∇ or UP button \triangle to set the volume of the ring tone; a beep will sound to confirm the setting |
| Turn off external station
Activate the external station | <ul style="list-style-type: none">• Press the Control button DOWN ∇ until the red LED lights up• Press the UP Control button \triangle ; the red LED goes out |
| Function button <input type="radio"/> | <ul style="list-style-type: none">• <input checked="" type="checkbox"/> Special function (Control function 8) - Default setting<ul style="list-style-type: none"><input type="checkbox"/> Internal call<input type="checkbox"/> Call forwarding<input type="checkbox"/> Doormatic |

User manual

Settings

Switch on programming mode

- Press the Function button \bigcirc for approx. 8 until you hear a brief beep
 - The red and green LEDs will flash on the monitor
 - Programming mode switched on
-

Setting the ring tones

- Switch on Programming mode (see above)
- Press the Talk button
- The red and green LEDs will flash on the monitor

Ring tone for Entrance 1 (AS 0)

- Press the Unlock door repeatedly until you hear the ring tone you require

Ring tone for Entrance 2 (AS 1-63)

- Press the Talk button repeatedly until you hear the ring tone you require

Ring tone for a Landing call

- Press the Function button \bigcirc repeatedly until you hear the ring tone you require

Ring tone for Internal call

- Press the Display button \square repeatedly until you hear the ring tone you require

Note

- The ring tones can be set in succession once the programming mode has been activated

Colour saturation adjustment

- Switch on the programming mode (see above)
- Press the Unlock button
- The green LED will flash on the monitor
- Using the Control buttons UP \triangle and DOWN ∇ adjust the colour saturation to your liking

Brightness control

- Switch on the programming mode (see above)
 - Press the Display button \square
 - The red LED will flash on the monitor
 - Using the Control buttons UP \triangle and DOWN ∇ adjust the brightness to your liking
-

Switch off programming mode

- If a button has not been pressed for 8 sec, the programming mode will switch off automatically
- A beep sounds; the red and green LEDs go out
- Programming mode is switched off