

Indoor Video Intercom Station VTC42, VTC42/L

VTC42



VTC42/L



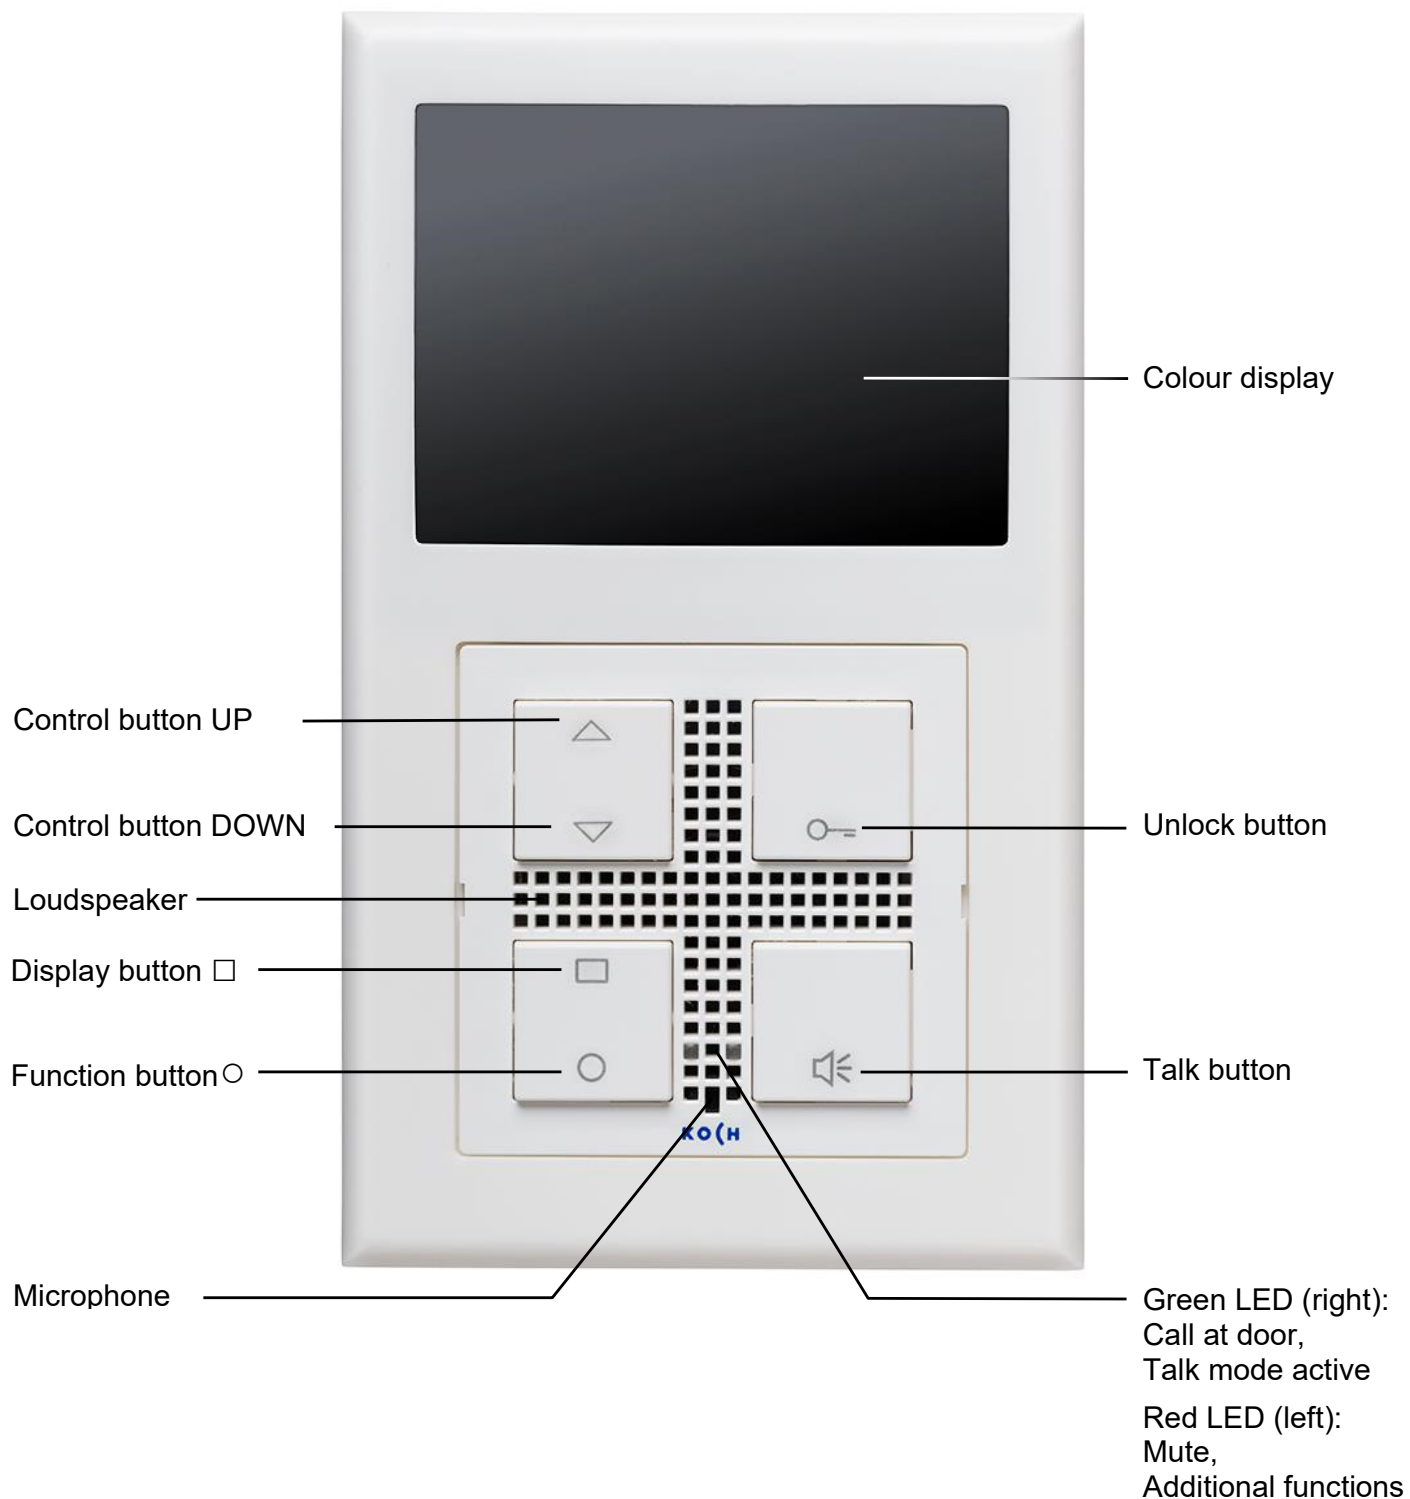 
Ring-tones

Differentiation of calls when ringing from the Entrance, the Landing door and an Internal call.
The green LED lights up for 60 sec. when there is a call from the entrance of the house or an internal call.

The image is automatically displayed when there is a call at the door.

User manual

Overview of the device



User manual

Instructions for use

Answer a call

- Hands-free (*Duplex*)
Press the Talk button briefly; you can now talk without any further action (hands-free)
- Push-to-talk (*Simplex. Recommended for disruptive ambient noise*)
Press the Talk button for more than 1 sec.
Press the button: Talk to the external station
Release the button: Listening from the external intercom station

End a call

- Manually
Press the Talk button briefly
- After the door is unlocked
Automatic shut-off 4 sec. after pressing the Unlock button
- Automatically
Automatic shut-off after 60 sec.

To unlock the door

- Briefly press the Unlock button

Display image

- Manually
Press the Display button ☐ briefly
- Automatically
Switches on automatically with call at door

Switch off monitor display

- Automatically
Shuts down automatically 80 sec. or 4 sec. after pressing the Unlock button

Call volume

- During a call use the Control DOWN or UP button to select the volume required

Selecting ring-tone volume

- When in idle mode use the Control DOWN or UP button to set the volume of the ring-tone; a beep will sound to confirm the setting

Turn off the ring-tone

Activate the ring-tone

- Press the Control button DOWN until the red LED lights up
- Press the Control button UP; the red LED goes out


Function button ☐

- ☒ Special function (Control function 8) - Default setting
 - ☐ Internal call
 - ☐ Call forwarding
 - ☐ Doormatic

User manual

Settings

Switch on Programming mode

- Press the Function button  for approx. 8 until you hear a brief beep
- The red and green LEDs will flash on the monitor
- Programming mode switched on


Setting the ring-tones

- Switch on the programming mode (see above)
- Press Talk button
- The red and green LEDs will flash on the monitor

 
Ring-tone for Entrance 1 (AS 0)

- Press the Unlock door repeatedly until you hear the ring-tone you require

Ring-tone for a Landing call

- Press the Function button  repeatedly until you hear the ring-tone you require

Ring-tone for Internal call

- Press the Display button  repeatedly until you hear the ring-tone you require

Ring-tone for Entrance 2 (AS 1-63)

- Press the Talk button repeatedly until you hear the ring-tone you require

 
Note

- The ring-tones can be set in succession once the programming mode has been activated

Colour saturation adjustment

- Switch on the programming mode (see above)
- Press Unlock button
- The green LED will flash on the monitor
- Using the Control buttons UP and DOWN adjust the colour saturation to your liking

Brightness control

- Switch on the programming mode (see above)
- Press the Display button 
- The red LED will flash on the monitor
- Using the Control buttons UP and DOWN adjust the brightness to your liking

Switch off Programming mode

- If no button has been pressed for 8 sec, the programming mode will switch off automatically
- A beep sounds; the red and green LEDs go out
- Programming mode switched off